



DEPTH

Installation Instructions

TOOLS NEEDED

- Drill
- 1/4" (6 mm) Drill Bit
- Phillips Head Screw Driver
- Level
- Tape Measure
- Pencil
- Safety Gloves
- Safety Goggles

PREPARE FOR INSTALLATION

1. Follow uncrating instructions found on the exterior of your crate.
2. Measure the distance between each hole from the center of each hole, taking note of measurements.
3. Mark center of hole location on wall for each hole.
4. Drill holes using the 1/4" (6mm) bit.

INSTALL MOUNTING HARDWARE

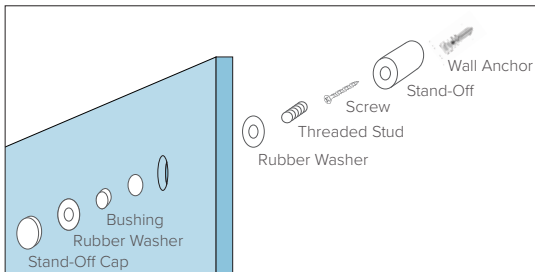


Fig. A

1. Install drywall anchors.
2. Install stainless steel standoff hardware firmly into wall anchor (*Please note the order of application in Fig. A*).

HANG GLASSBOARD DEPTH Fig. B

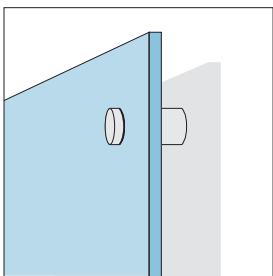


Fig. B

1. Insert threaded studs into standoff hardware.
2. Properly place protective washers and bushings onto threaded stud.
3. Carefully place glassboard onto threaded studs so that glass rests on protective bushings.
4. Install protective washers and fasten standoff caps by hand (*Do not over-tighten caps*).
5. Now you're ready to collaborate.