

DIVIDE THINLINE™


Installation Instructions


**PLEASE READ ALL INSTRUCTIONS
BEFORE INSTALLATION**




DIVIDE THINLINE™

TOP CLAMP & SIDE CLAMP

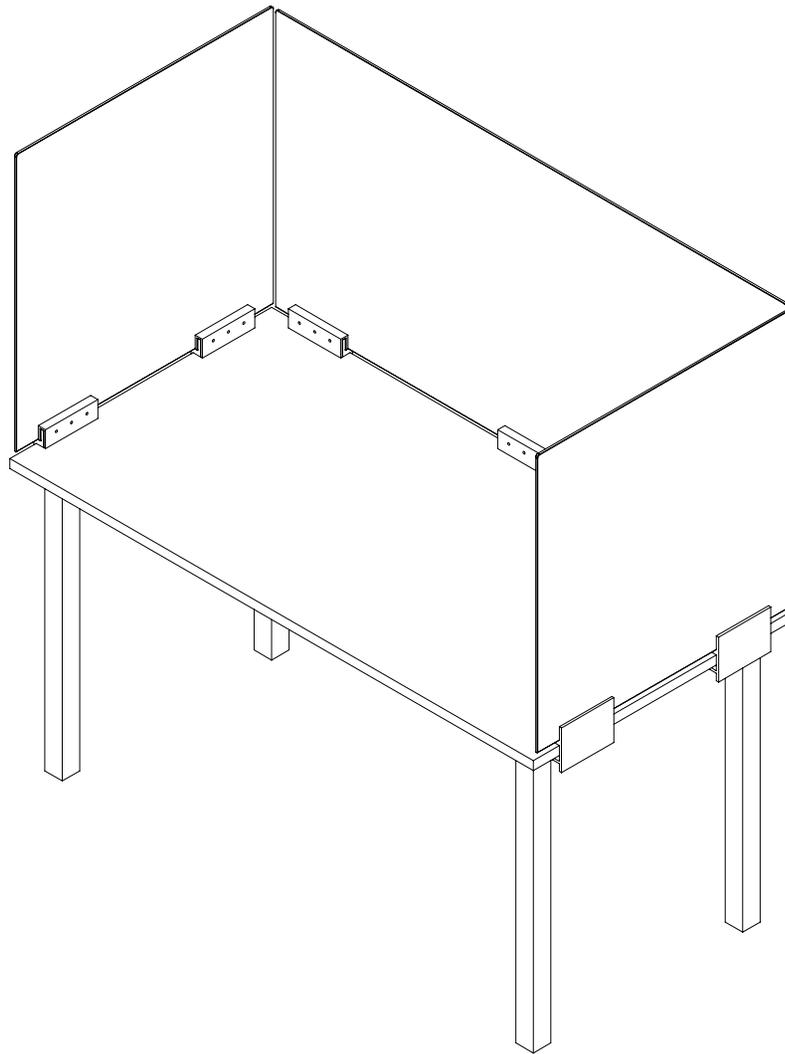


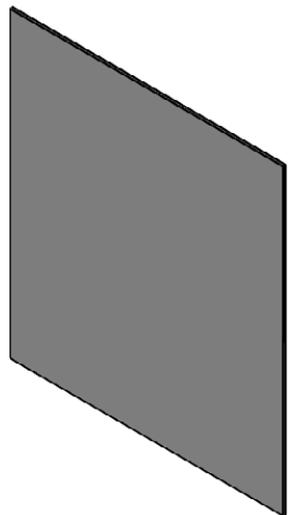


Glass

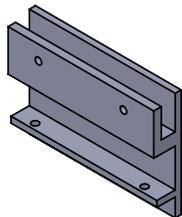


ThinLine Top Clamp*

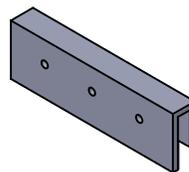

ThinLine Top Shim*

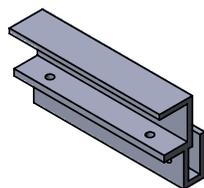

ThinLine Side Clamp*

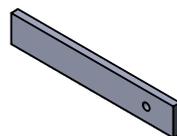

ThinLine Side Shim*

INCLUDED HARDWARE

Depending on the order, either of the clamp shims are provided as a pair together.

- 10mm Socket head set screw (**Fig. A**)
- 30mm Socket head set screw (**Fig. B**)
- Pressure plate (**Fig. C**)
- Corner bracket (**Fig. D**)
- Nylon tip set screws (**Fig. E**)

**Depending on width of glass, size of clamp, and/or type of clamp, quantity varies*



Fig. A 10mm Socket head set screw*



Fig. B 30mm Socket head set screw*



Fig. C Pressure plate*

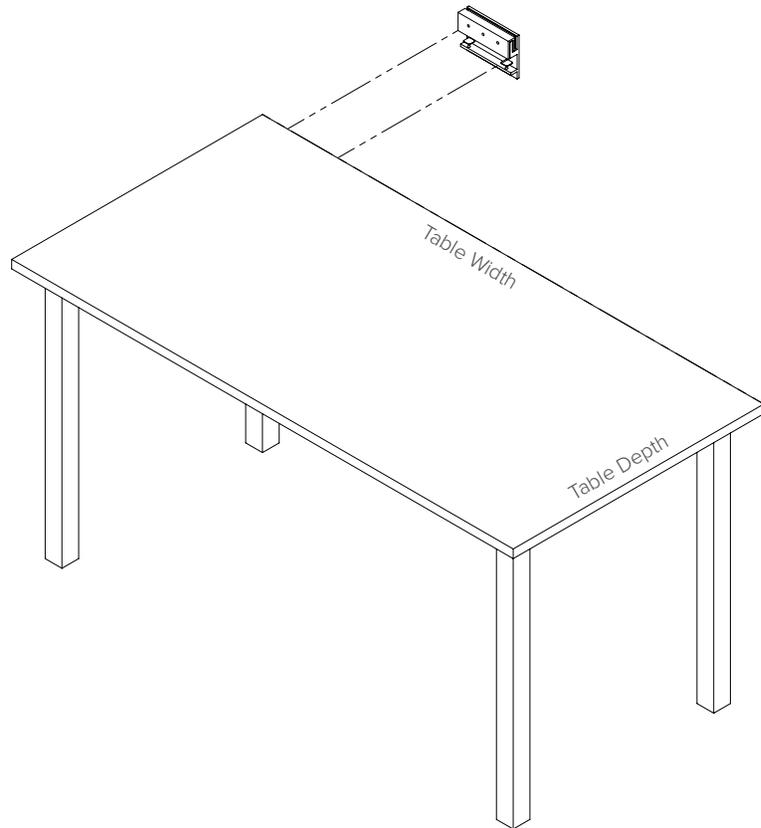


Fig. D Corner bracket



Fig. E Nylon tip set screws

Fig. F



STEP 1

Back Glass (widest panel): Of the three glass panels provided, it is wider and has to be installed along the back of the table.

Side Glass: The other 2 panels are side glass panels and have to be installed along the sides of the table.


Slide clamp shim assembly on to the table as shown (Fig. F). Location of each clamp shim assembly on table and the number of clamp shim assemblies on each edge of the table is described in the tables.

Note: For each piece of glass, the two clamps at the ends should be 3" (76mm) from the edge. Any other clamps should be evenly spaced between them.

6" (152MM) CLAMP			
Table Width		Table Depth	
< 66" (1676mm)	3 clamps along the back	< 36" (914mm)	2 clamps on the sides
> 66" (1676mm)	4 clamps along the back	> 36" (914mm)	3 clamps on the sides

2 1/2" (64MM) CLAMP			
Table Width		Table Depth	
< 48" (1219mm)	3 clamps along the back	< 30" (762mm)	2 clamps on the sides
48" (1219mm) - 66" (1676mm)	4 clamps along the back		
66" (1676mm) - 84" (2134mm)	5 clamps along the back	> 30" (762mm)	3 clamps on the sides
> 84" (2134mm)	6 clamps along the back		

Fig. G*

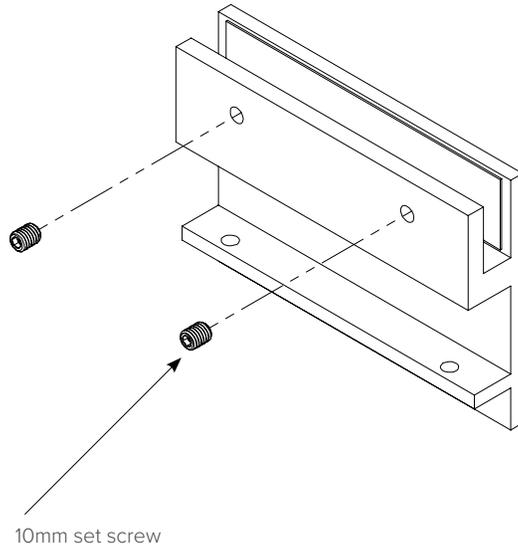


STEP 2

Drive 10mm set screws into empty holes of clamp as shown (Fig. G) but do not stick them all the way through the holes.


Place shim in the slots of each clamps as shown (Fig. H).

Fig. H*

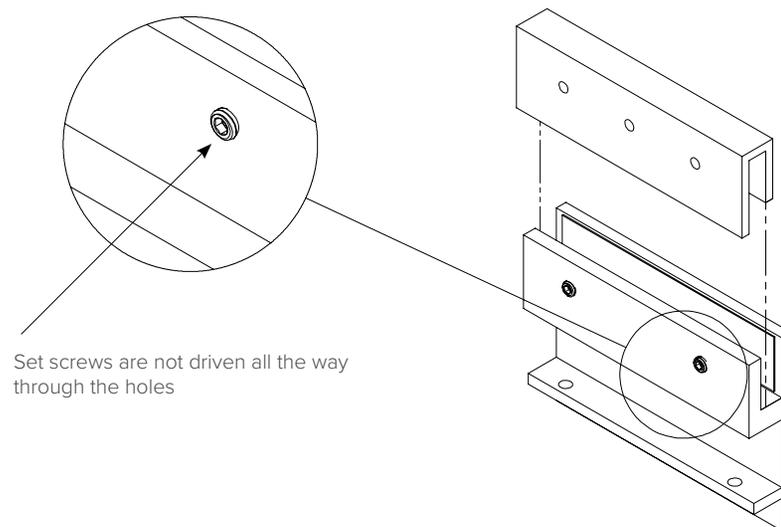

*Top Clamp shown in demonstration. Please use same method to complete Side Clamp installation.

Fig. I*

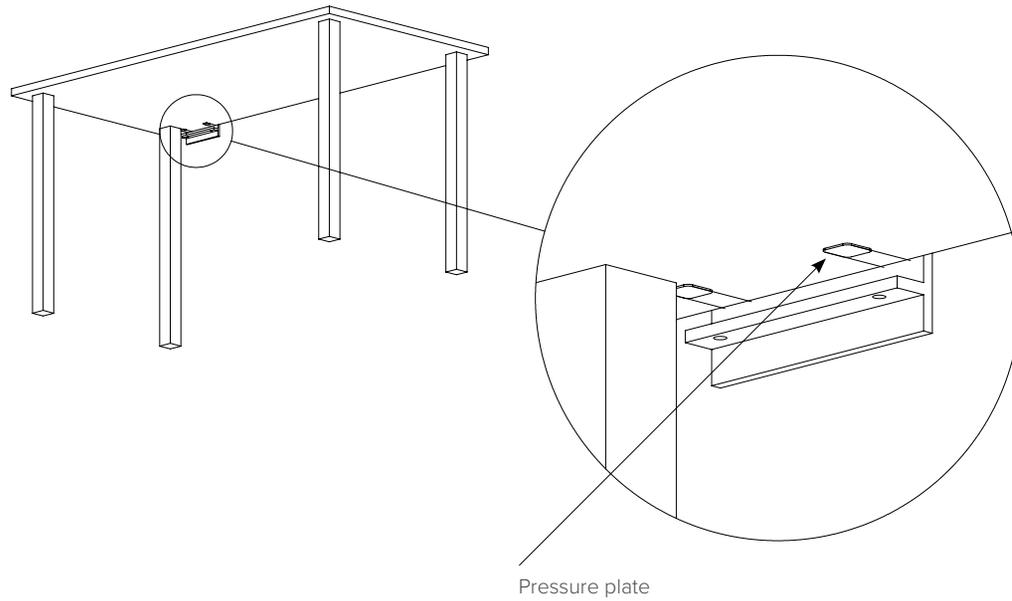


STEP 3

Slide in the pressure plates in the gap between clamp and table (Fig. I).

Drive 30mm set screws into empty holes of clamp under the table to tighten pressure plate on to the table (Fig. J).

Fig. J*

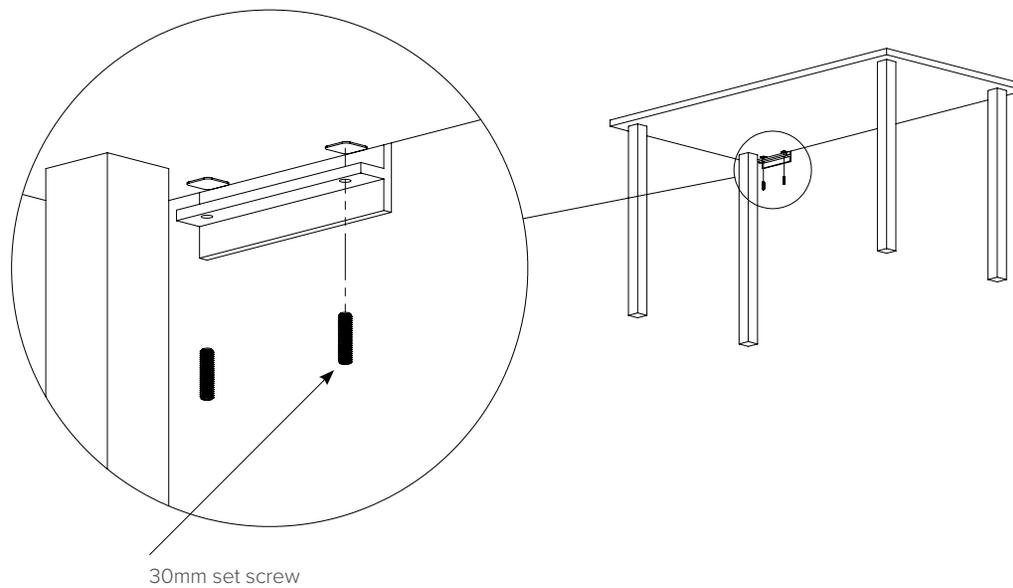

*Top Clamp shown in demonstration. Please use same method to complete Side Clamp installation.

Fig. K*


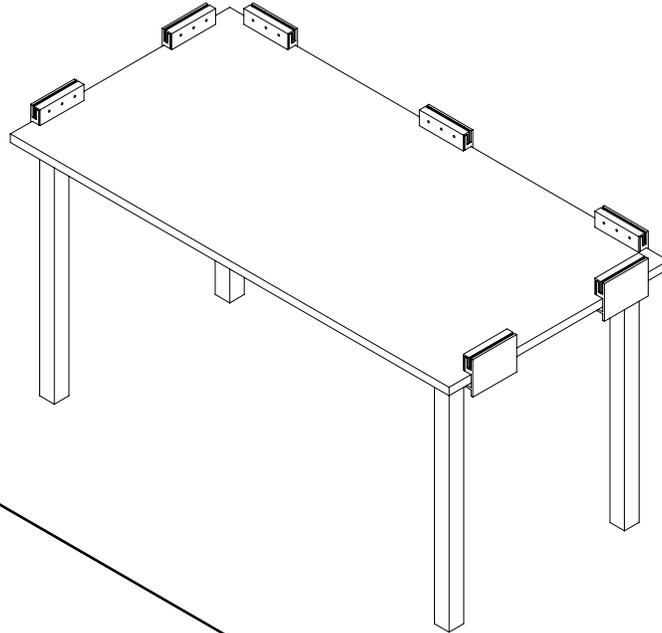


Fig. L*

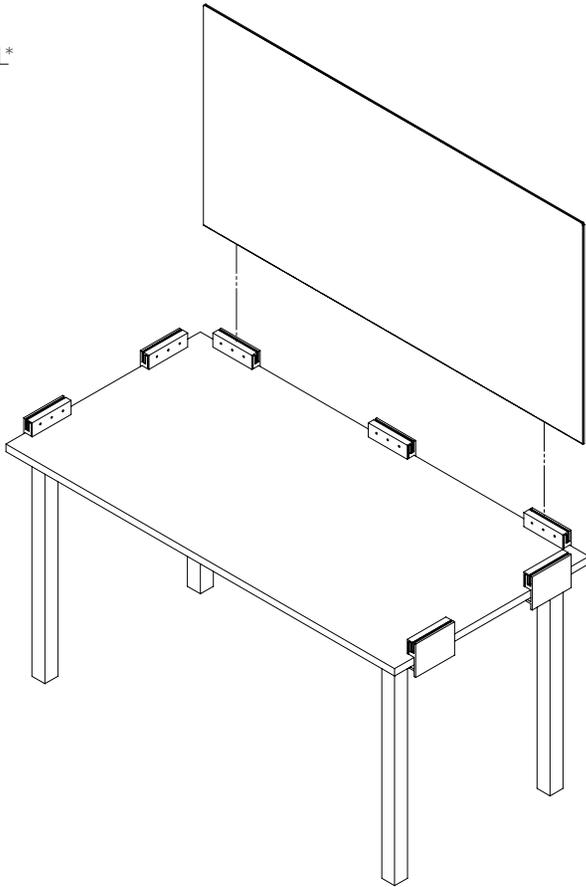


STEP 4

Attach all clamp shim assemblies on to the table as described in the previous steps (Fig. K).

Slide in back glass into the pockets of the clamp shim assembly and center it along width of the table (Fig. L).

*Top Clamp shown in demonstration. Please use same method to complete Side Clamp installation.

Fig. M*

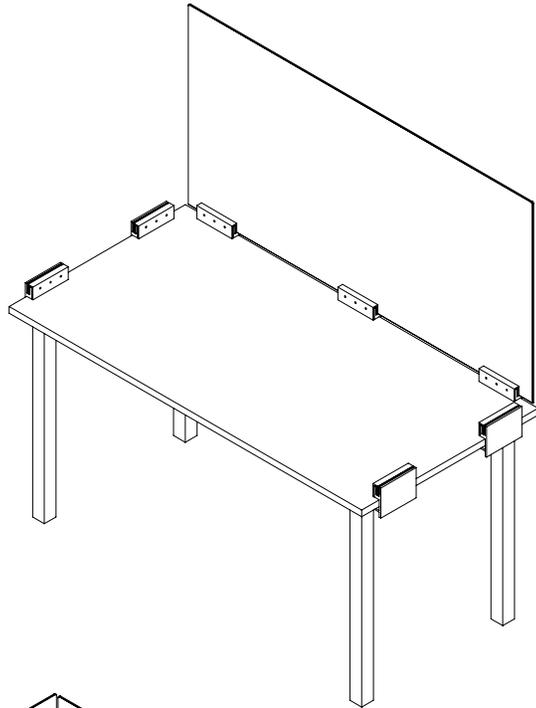


STEP 5

Once back glass is centered on table, tighten previously installed set screws in the back clamps with allen key provided (**Fig. M**).

Slide in side glass into slots of side clamps (**Fig. N**).

Fig. N*

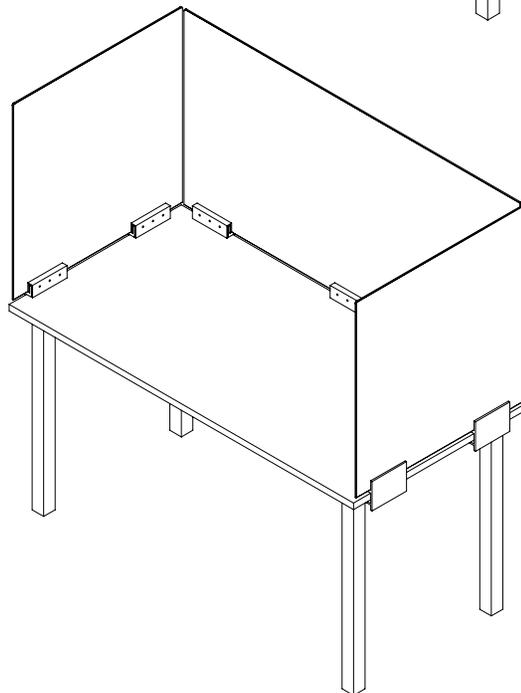

*Top Clamp shown in demonstration. Please use same method to complete Side Clamp installation.

STEP 6

Front edge of side glass must be 1/2" (13mm) away from the front of the table (Fig. O).

Back edge of side glass must be flush with the back face of the back glass (Fig. P).

Once side glass is adjusted as shown below, tighten previously mentioned 10mm set screws with allen keys provided.

Fig. O (Divide ThinLine shown from above).

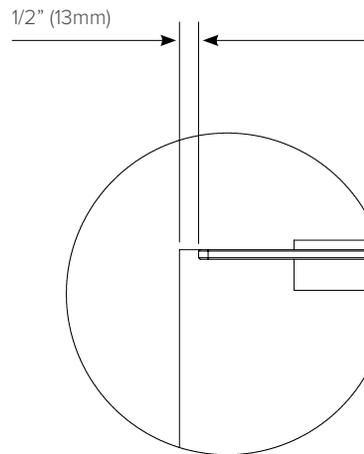


Fig. P


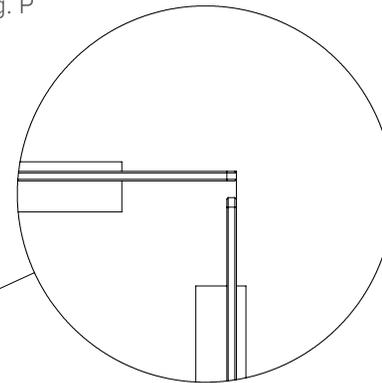


Fig. Q*

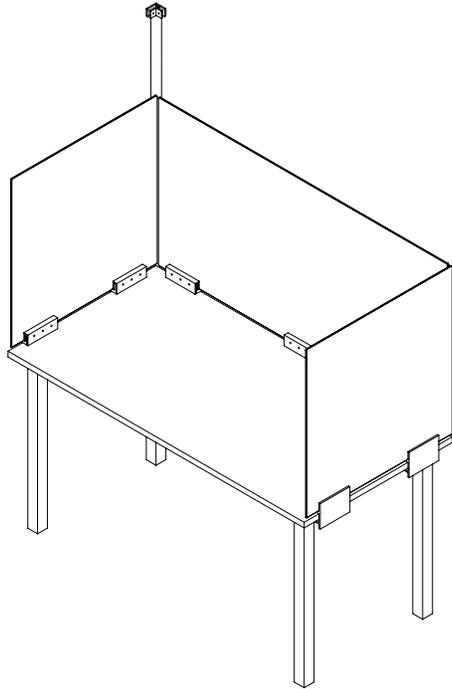


STEP 7

Align corner bracket with edge of side glass and back glass and slide it down along the faces of side glass and back glass as shown (Fig. Q). Top face of corner bracket must be 1" (25mm) below top face of the glass (Fig. R).

Install nylon tip set screws into holes of corner bracket (Fig. R).

Repeat this step for the other corner bracket on the other side.


Fig. R*

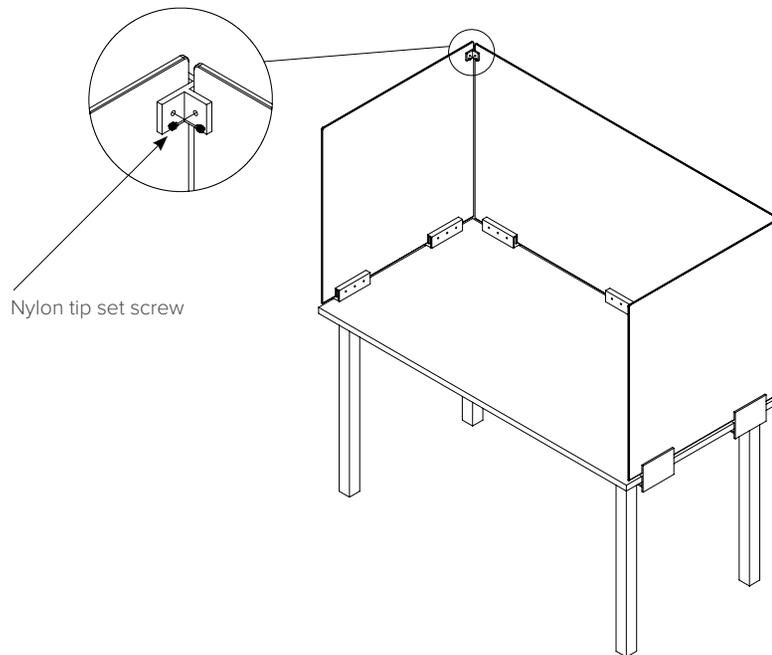


*Top Clamp shown in demonstration. Please use same method to complete Side Clamp installation.

STEP 8

Your Divide ThinLine is now assembled and ready!

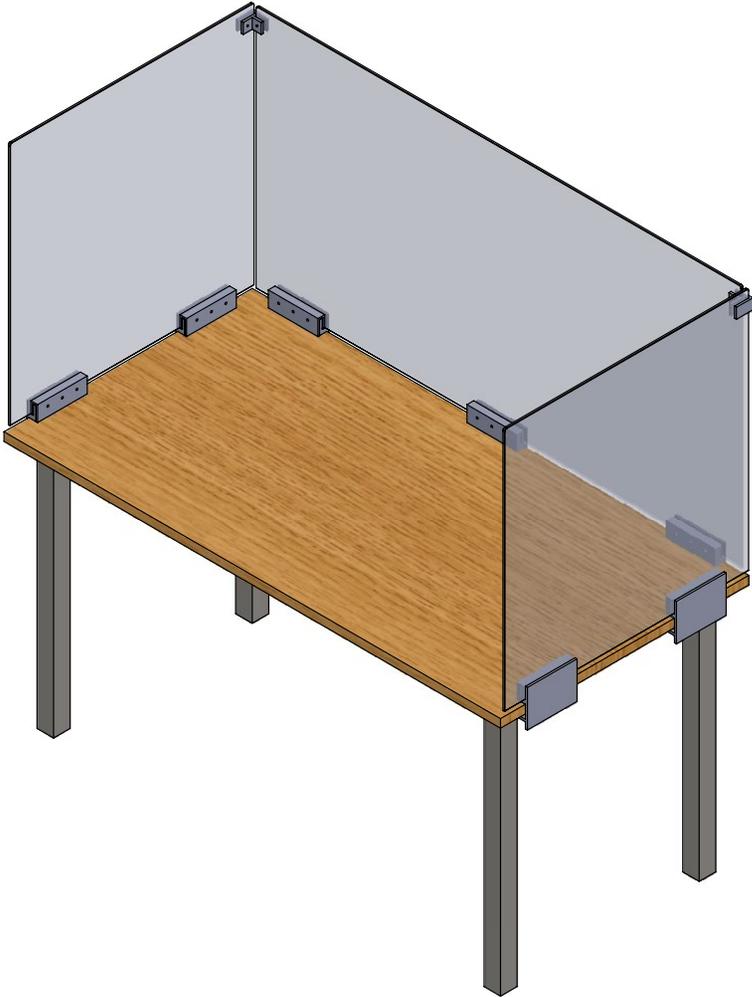


Divide ThinLine with Top Clamp

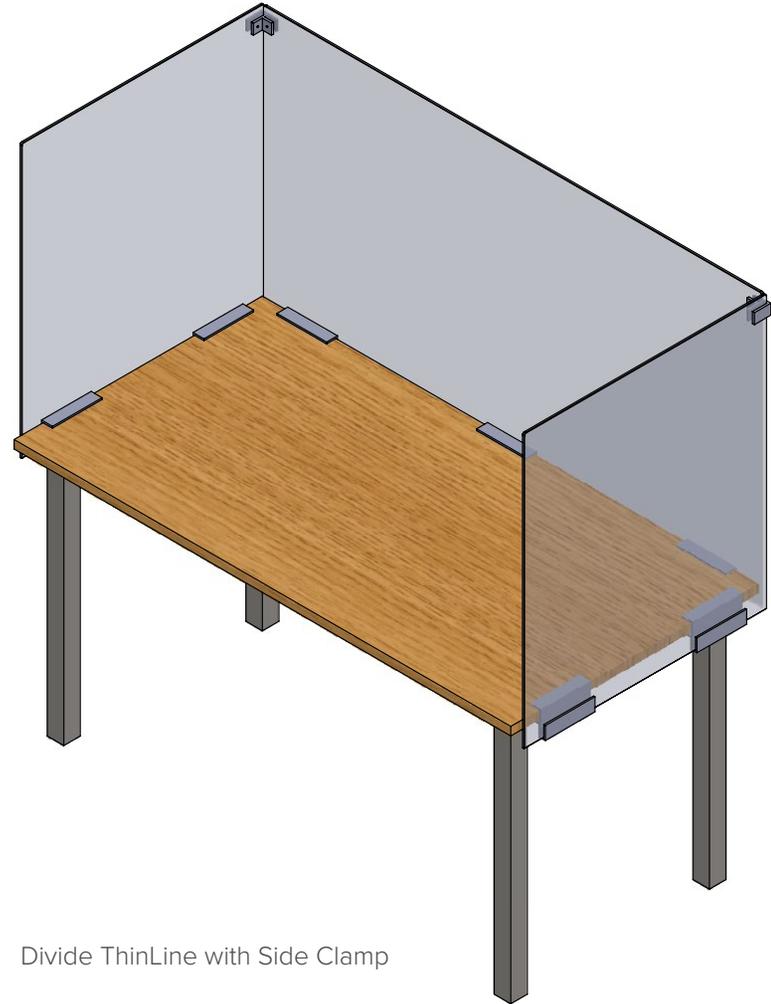

Divide ThinLine with Side Clamp


DIVIDE THINLINE™

CENTER CLAMP

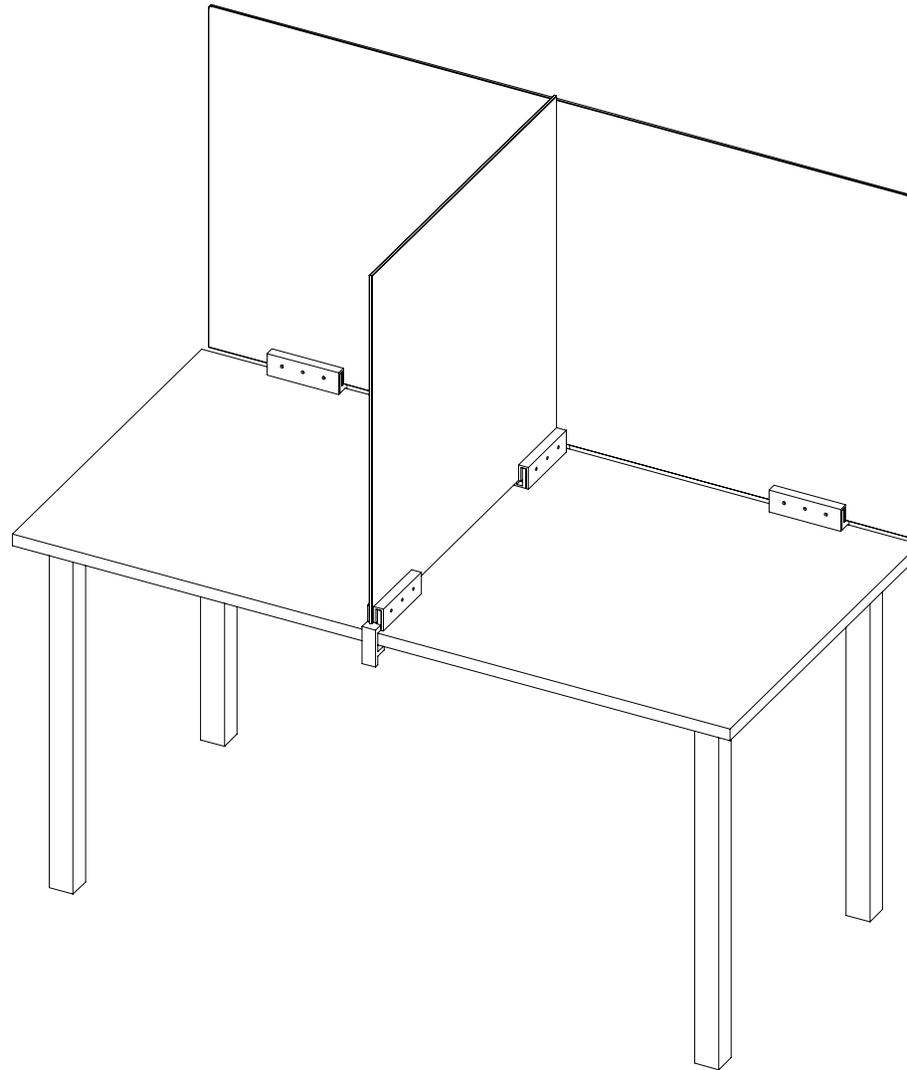

INCLUDED HARDWARE

- Two (2) ThinLine Center Clamps (Fig. A)
- Two (2) ThinLine Center Clamp Hooks (Fig. B)
- Two (2) ThinLine Center Clamp Shims (Fig. C)
- Four (4) 10mm Socket head set screws (Fig. D)
- Two (2) 30mm Socket head set screws (Fig. E)
- Two (2) Pressure plates (Fig. F)
- One (1) Allen key (Fig. G)

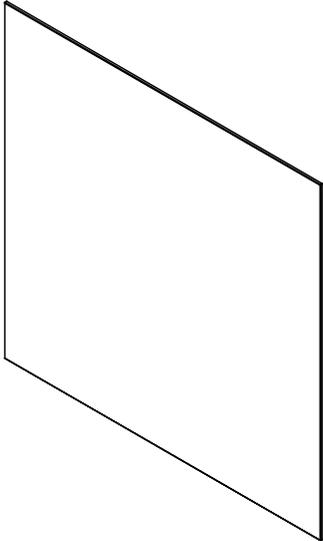

Glass

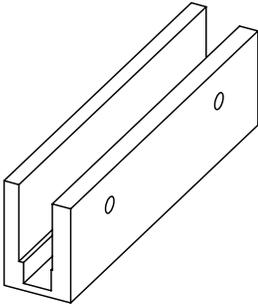


Fig. A ThinLine Center Clamp, QTY: 2

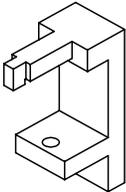


Fig. B ThinLine Center Clamp Hook, QTY: 2

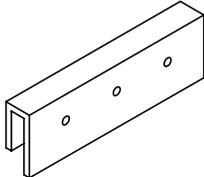


Fig. C ThinLine Center Clamp Shim, QTY: 2



Fig. F Pressure plate, QTY: 2



Fig. G Allen key, QTY: 1

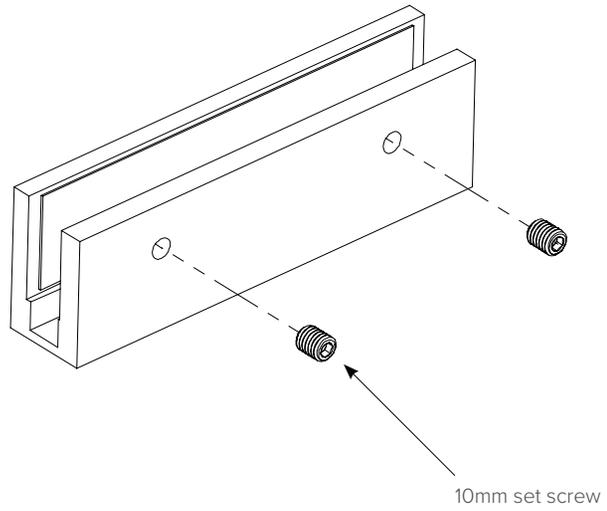


Fig. D 10mm Socket head set screw, QTY: 4



Fig. E 30mm Socket head set screw, QTY: 2

Fig. H



STEP 1

Start two 10mm set screws into the ThinLine Center Clamp until the ends are just flush with the back side of the hole (**Fig. H**).

Start a 30mm set screw into the bottom of the ThinLine Center Clamp Hook (**Fig. I**).

Fig. I


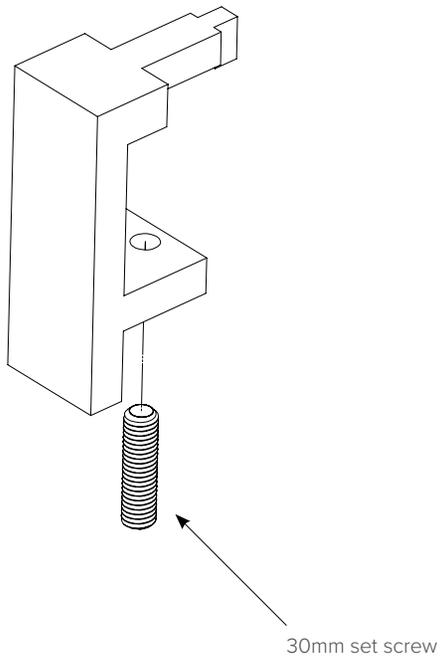


Fig. J

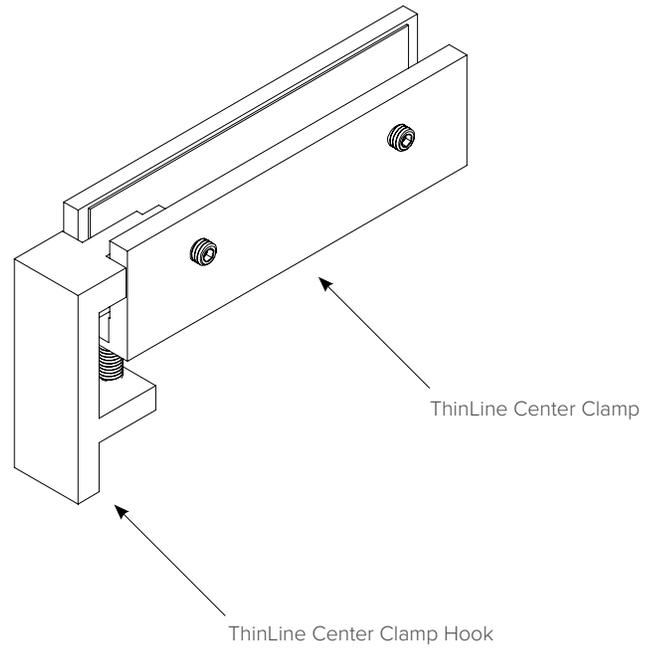

STEP 2

Insert a ThinLine Center Clamp Hook into slot on one ThinLine Center Clamp, and another Hook into the opposite slot on the other ThinLine Center Clamp (**Fig. J**).

Slide ThinLine Center Clamp and Hook assembly onto the table at installation location (**Fig. K**).

Fig. K


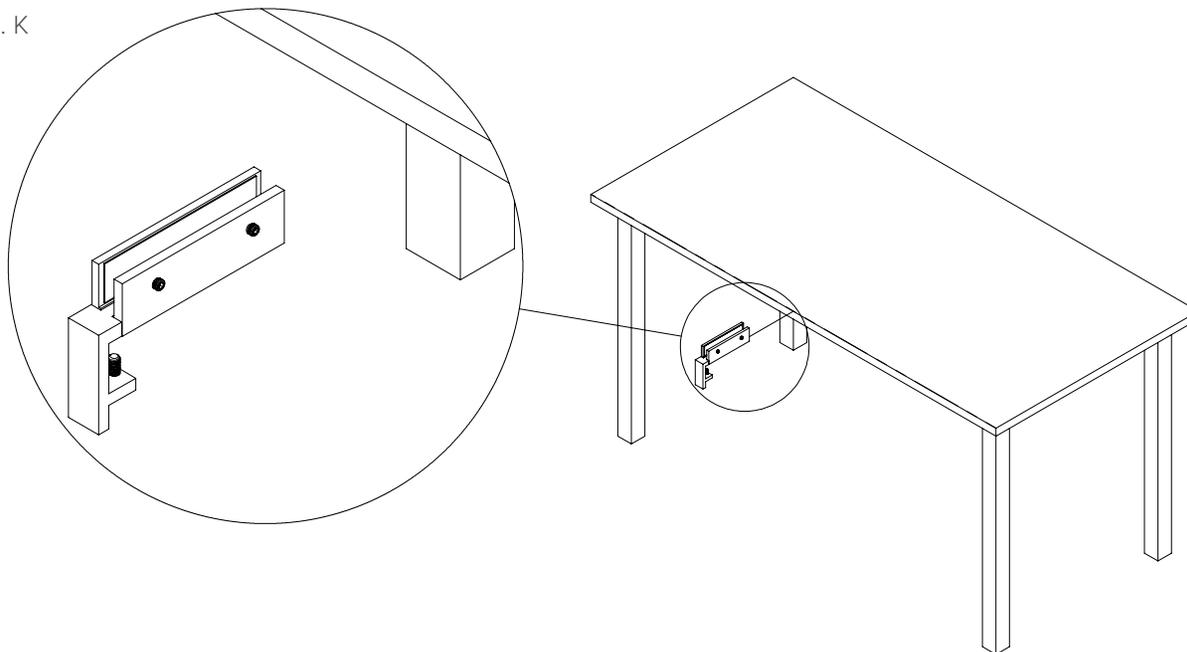


Fig. L

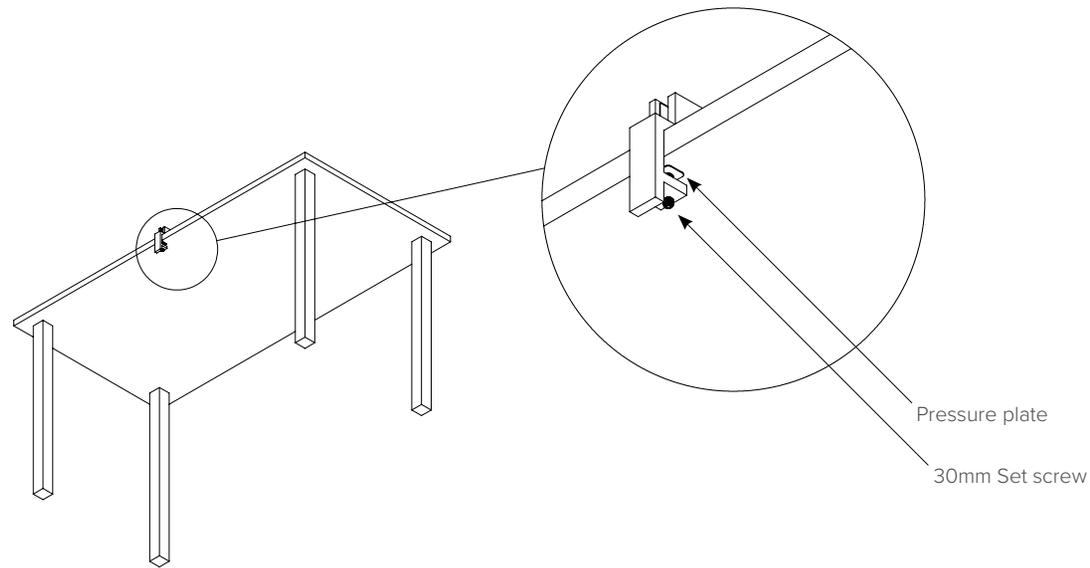

STEP 3

Place pressure plate in between set screw and table bottom (**Fig. L**), then tighten the set screw with the allen key provided.

Install second ThinLine Center Clamp and Hook assembly onto the table as described in the previous steps. It must be installed evenly with the first clamp and the holes on both clamps facing the same direction (**Fig. M**).

Fig. M


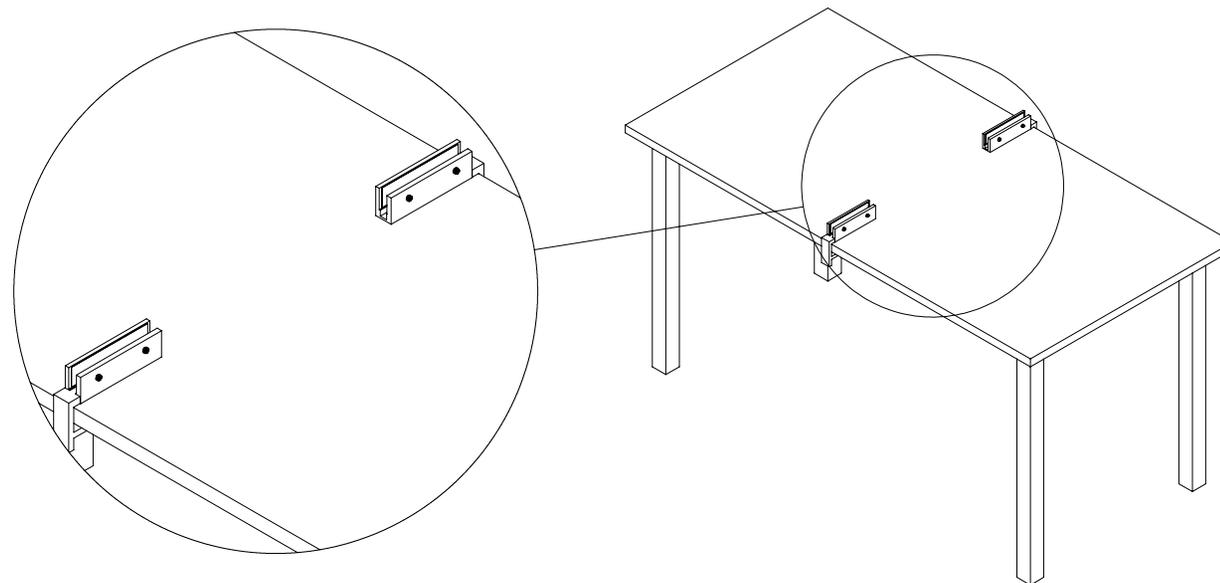



Fig. N

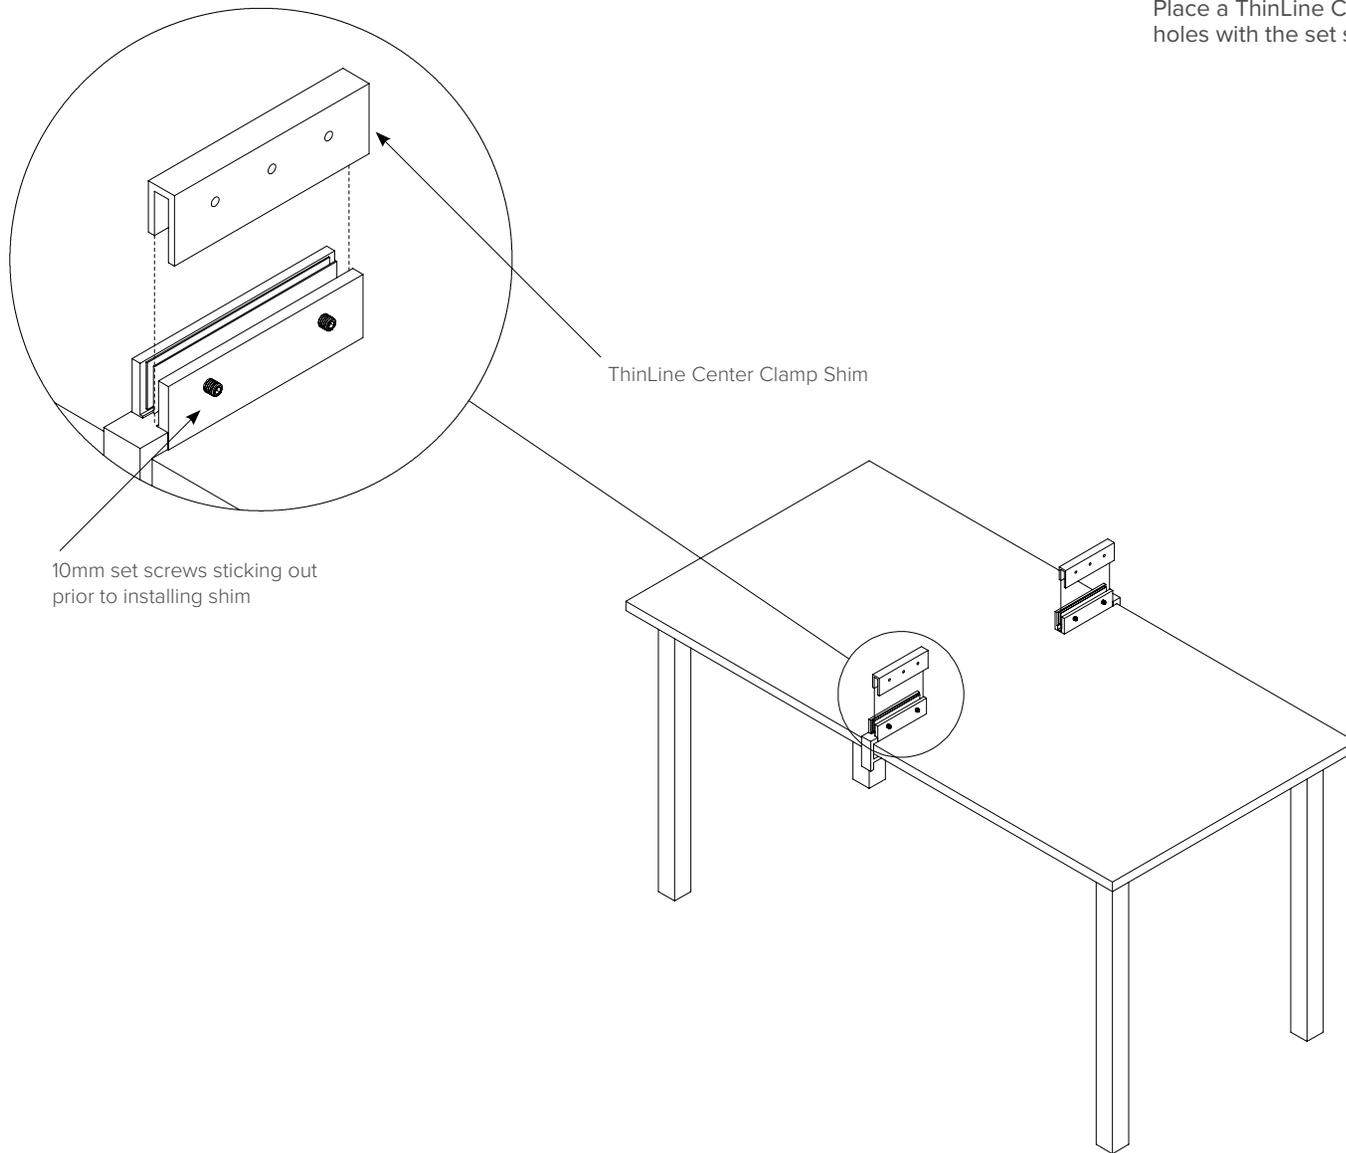

STEP 4

Place a ThinLine Center Clamp Shim in each clamp and align the holes with the set screws (**Fig. N**).


Fig. O

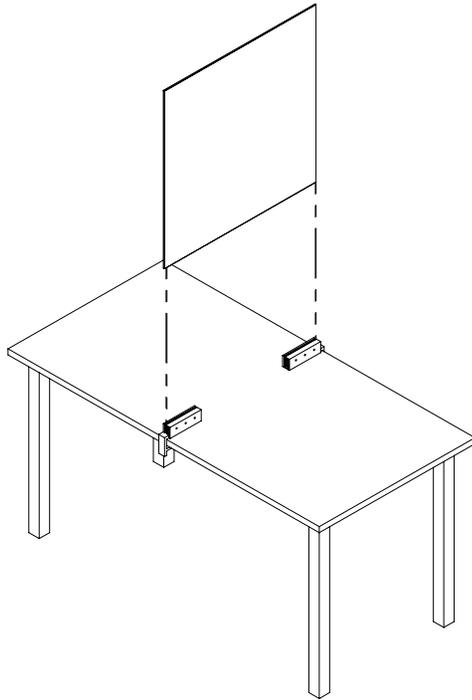

STEP 5


Place the glass into the slots of two ThinLine Center Clamps (Fig. O). The back edge of the glass must be flush with the back edge of the ThinLine Center Clamp (Fig. P). The front edge of the glass should stick out 1/4" (6mm) from the front edge of ThinLine Center Clamp as shown (Fig. Q). Once aligned, tighten the set screws with the allen key.

Fig. P

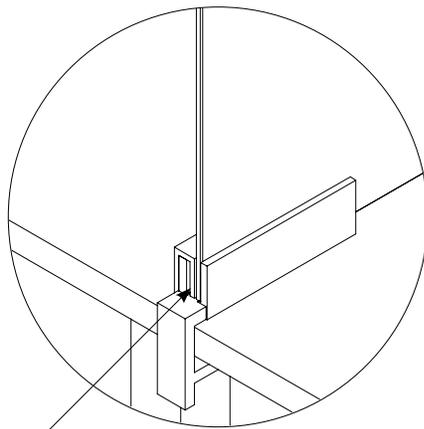

Back edge of the clamp behind the table


Fig. Q

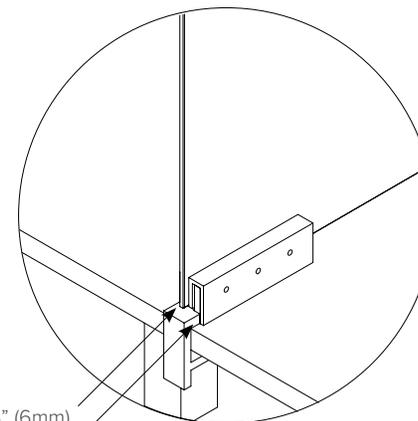

1/4" (6mm)

Front edge of clamp on front end of table


Fig. R

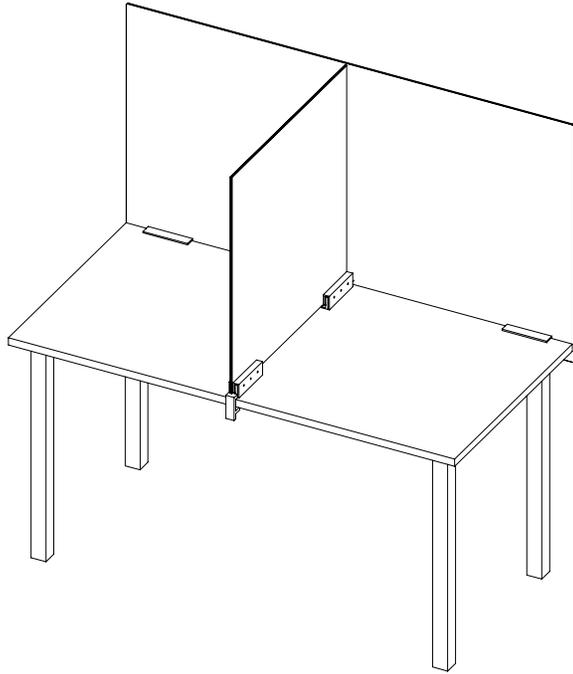

STEP 6


The ThinLine Center Clamp will work with either the ThinLine Side Clamp (Fig. R) or the ThinLine Top Clamp (Fig. S) installed along the back edge of the desk.

Fig. S

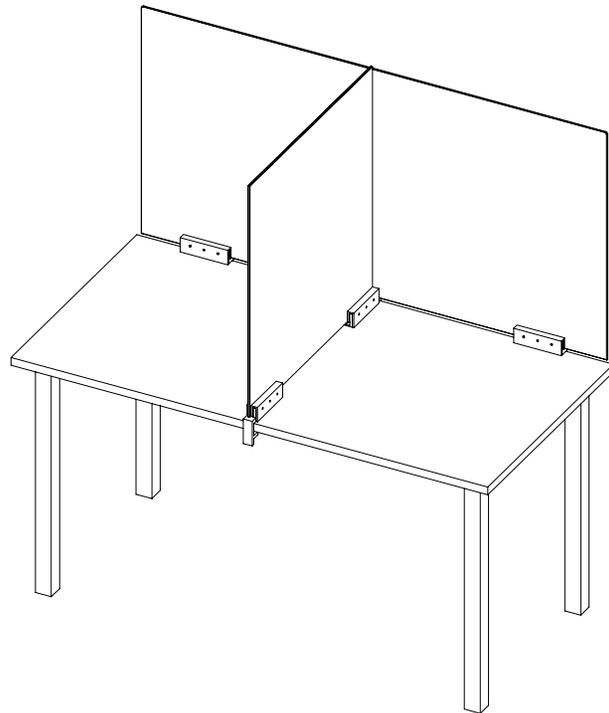


DIVIDE THINLINE™

CENTER CLAMP: BOLT DOWN

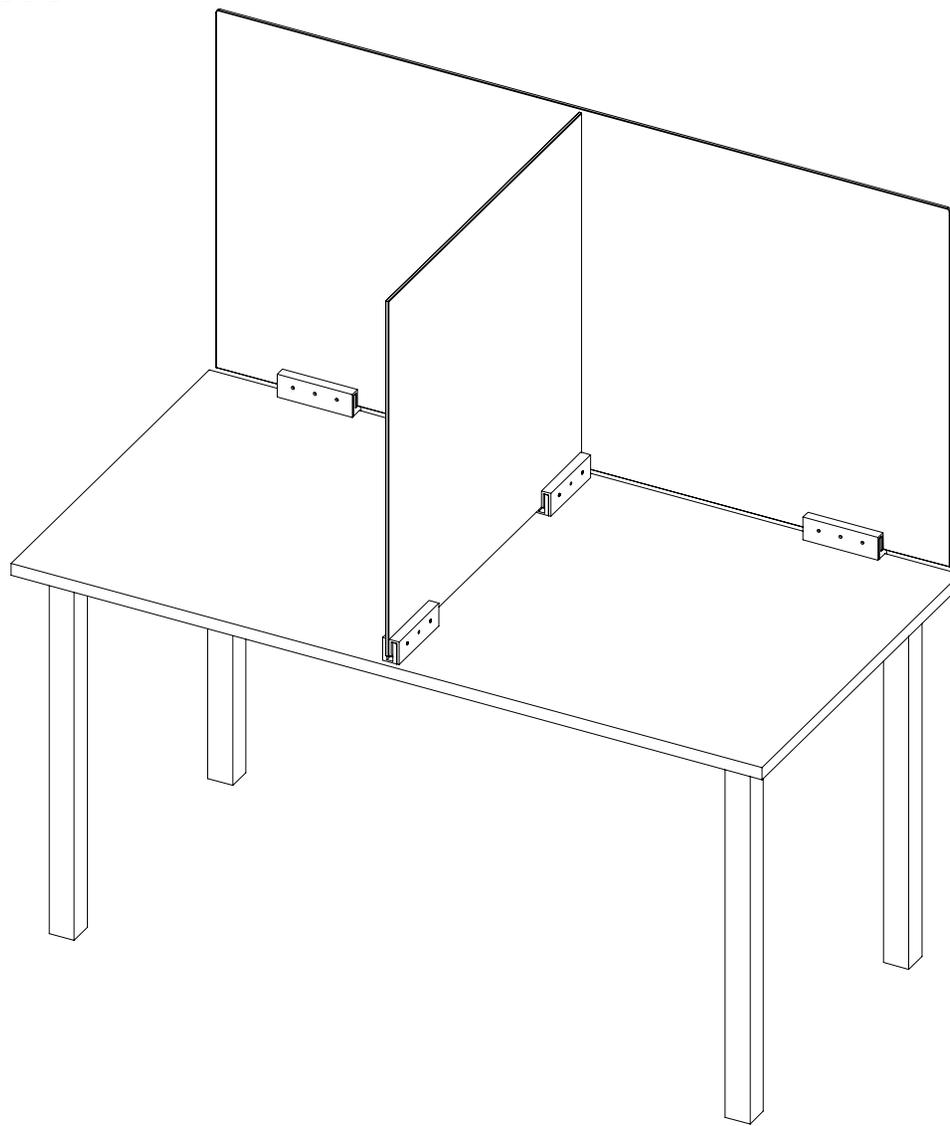

INCLUDED HARDWARE

- Two (2) ThinLine Center Clamps (Fig. A)
- Four (4) M6 Socket head cap screws (Fig. B)
- Two (2) ThinLine Center Clamp Shims (Fig. C)
- Four (4) 10mm Socket head set screws (Fig. D)
- Four (4) M6 Nuts (Fig. E)
- Four (4) Lock washers (Fig. F)
- Four (4) Flat washers (Fig. G)
- One (1) Allen key (Fig. H)

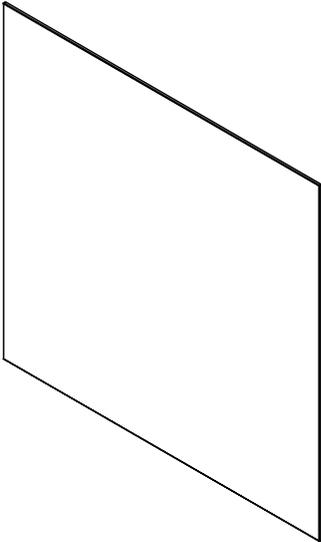

Glass

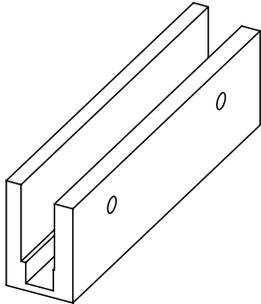


Fig. A ThinLine Center Clamp, QTY: 2



Fig. B M6 Socket head cap screw, QTY: 4

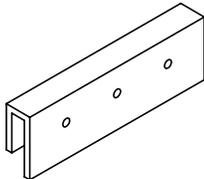


Fig. C ThinLine Center Clamp Shim, QTY: 2



Fig. D 10mm Socket head set screw, QTY: 4



Fig. E M6 Nut, QTY: 4



Fig. F Lock washer, QTY: 4

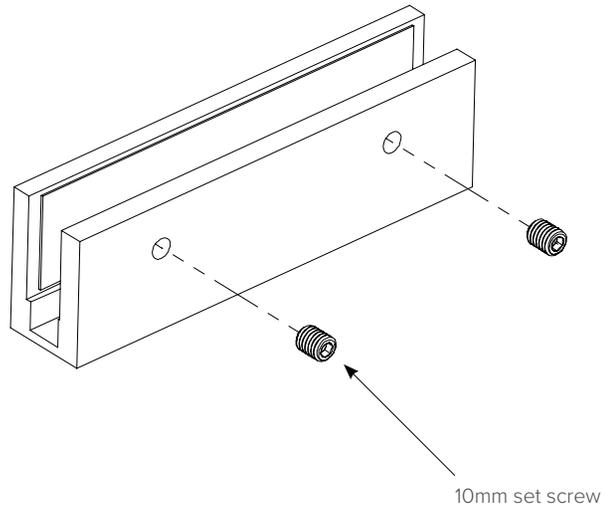


Fig. G Flat washer, QTY: 4



Fig. H Allen key, QTY: 1

Fig. I




STEP 1

Start two 10mm set screws into the ThinLine Center Clamp until the ends are just flush with the back side of the hole (**Fig. I**).

Place ThinLine Center Clamp at the installation location. Clamps must be 1/2" (13mm) away from front and back edges, the holes on each clamp must face same direction, and clamps must be even with each other. Mark the hole locations for bolts on the table and drill 1/4" (6mm) holes in the table (**Fig. J**).

Fig. J

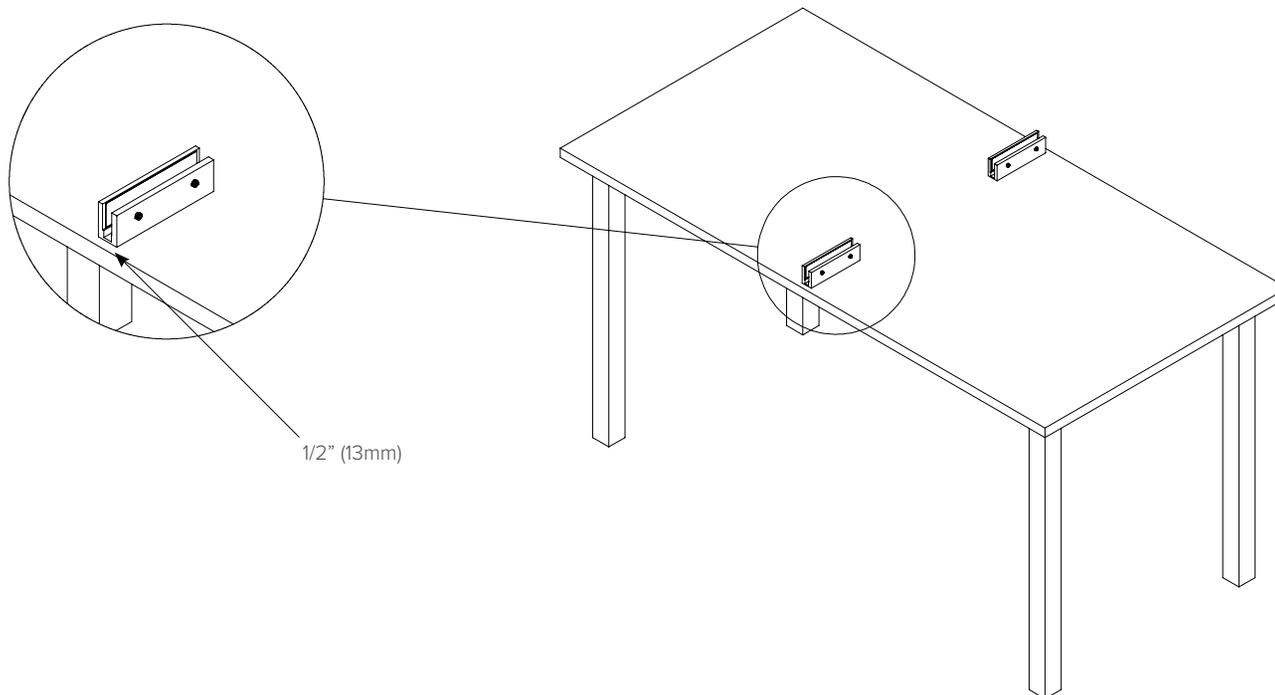

STEP 2

Align ThinLine Clamps with holes made on table, install M6 socket head cap screws in each hole and install flat washer, lock washer, and nut onto the screw (Fig. K).

Fig. K


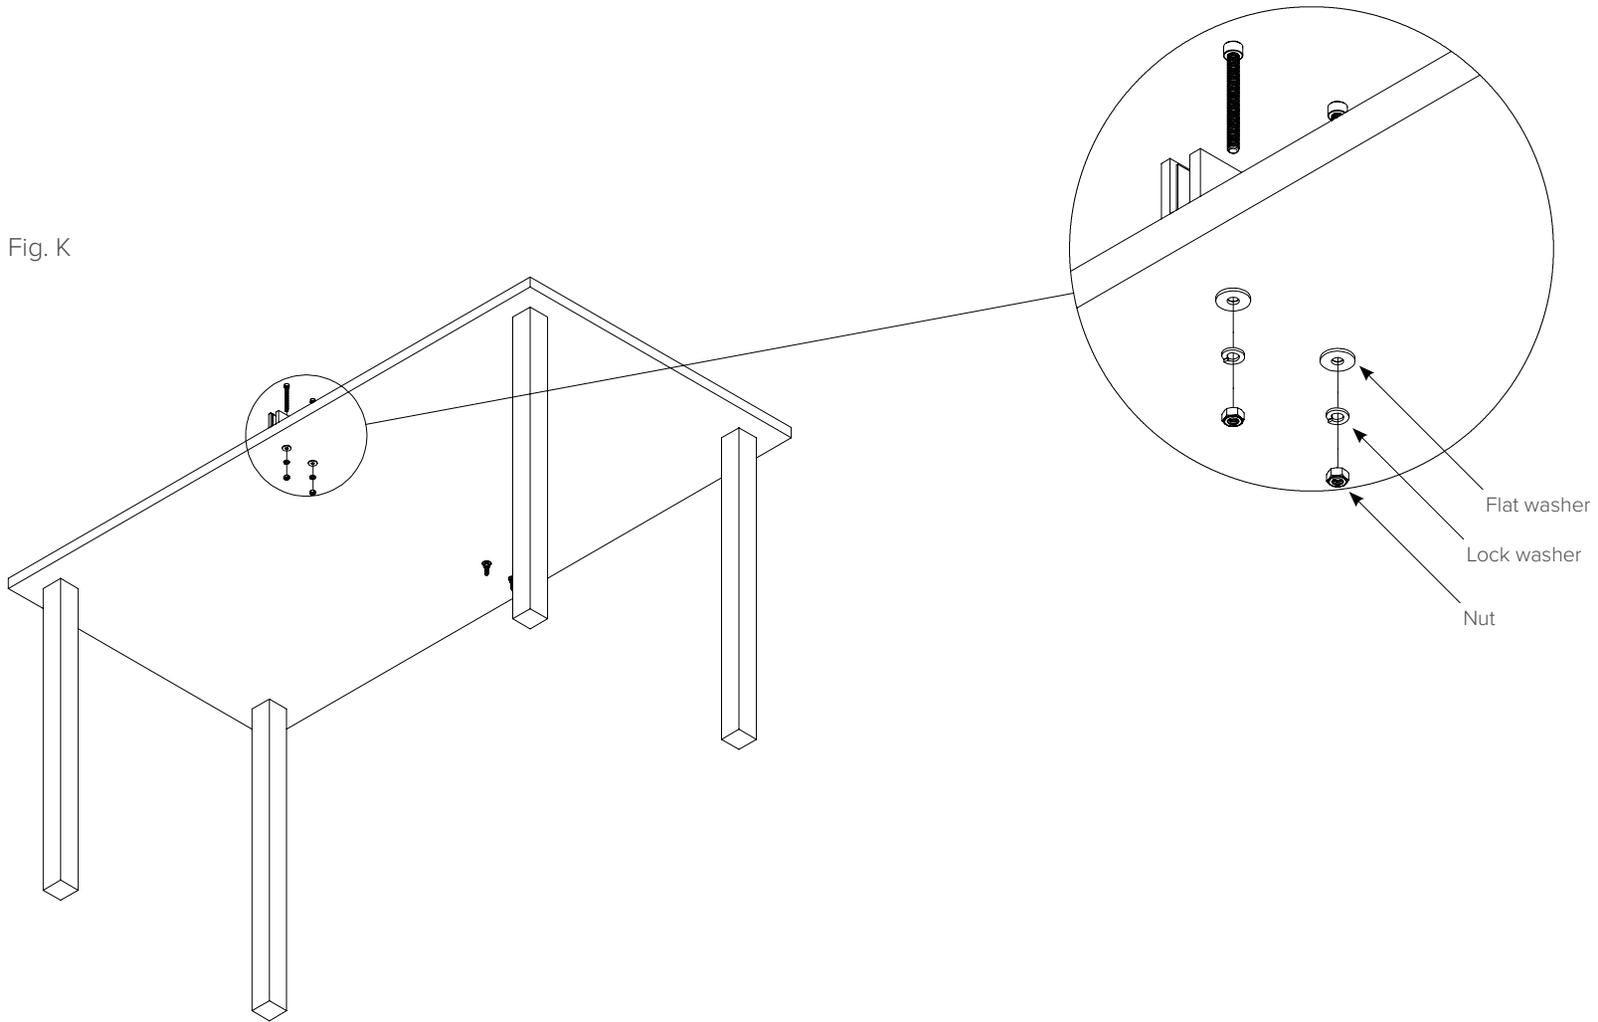


Fig. L

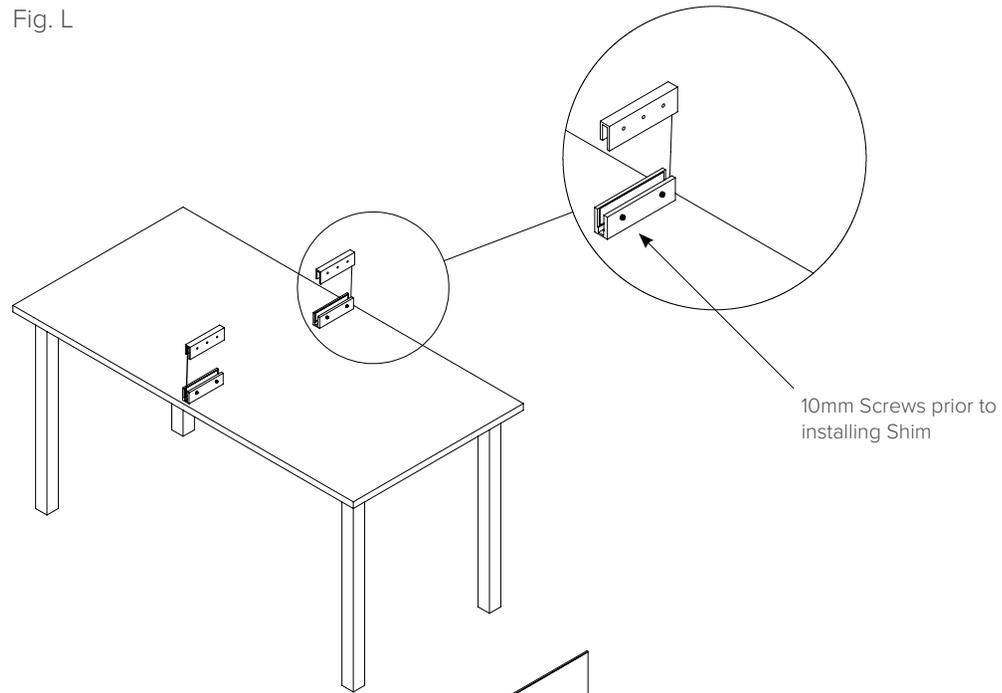

STEP 3

Place a ThinLine Top Shim in each clamp and align the holes with the set screws (**Fig. L**).

Place the glass into the slots of two ThinLine Center Clamps. The back edge of the glass must be flush with the back edge of the ThinLine Center Clamp. The front edge of the glass should stick out 1/4" (6mm) from the front edge of Thin Line Center Clamp as shown. Once aligned, tighten the set screws with the allen key (**Fig. M**).

Fig. M



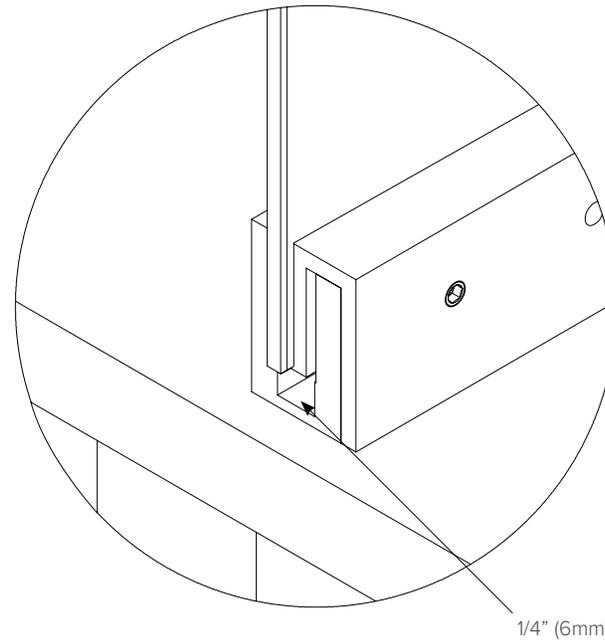


Fig. N

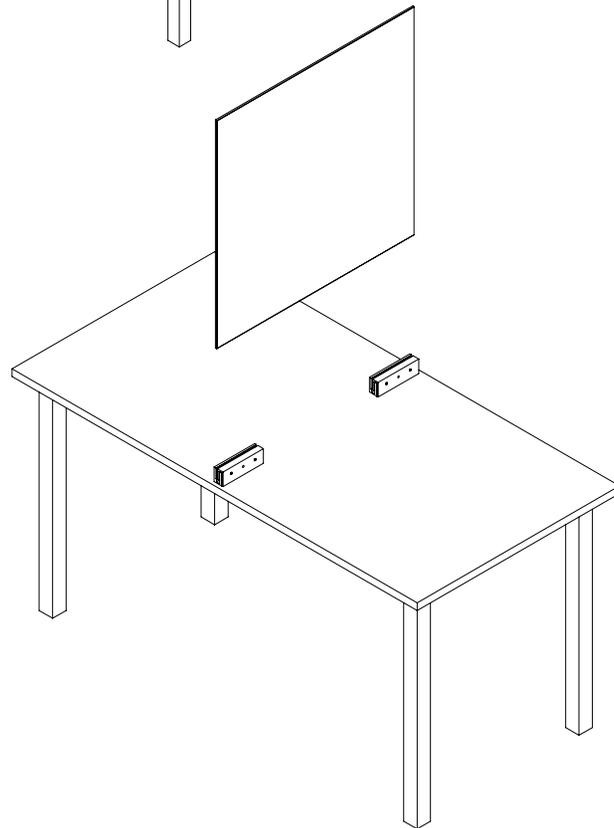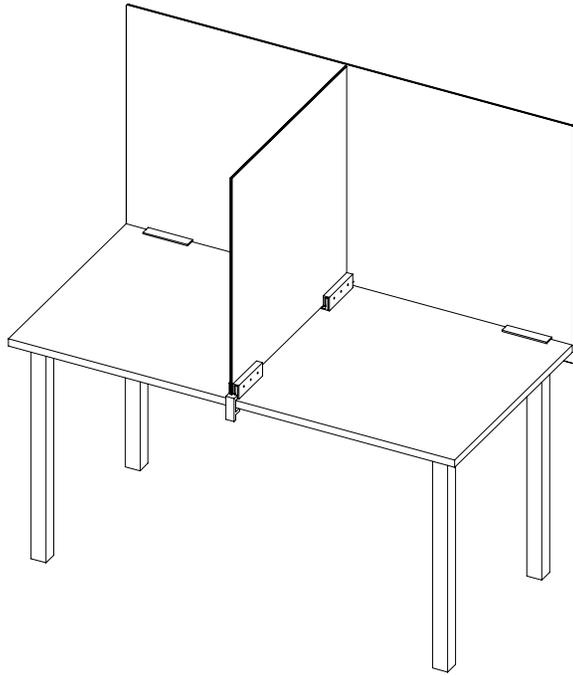

STEP 4

The ThinLine Center Clamp Bolted Down will work with either the ThinLine Side Clamp (**Fig. N**) or the ThinLine Top Clamp (**Fig. O**) installed along the back edge of the desk.

Fig. O

